



# Thule Rapid System Kit 1501






## > Instructions

**VOLKSWAGEN Passat CC**, 4-dr Coupé, 08-11

**VOLKSWAGEN Passat CC**, 4-dr Coupé, \*09-11

**VOLKSWAGEN CC**, 4-dr Coupé, 12-

\*North America

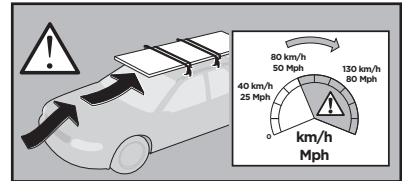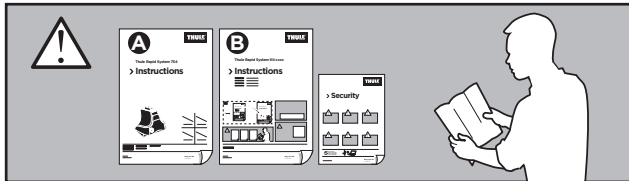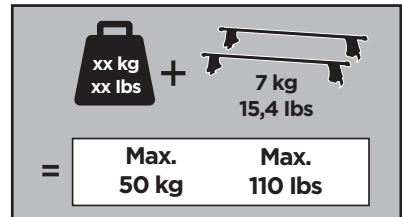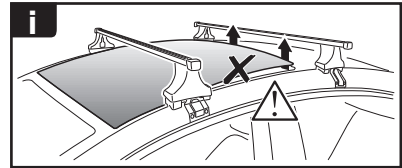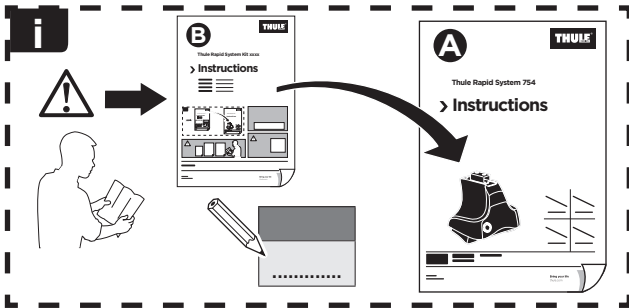

ISO 11154-E

141501  
C.20150225  
519-1501-06

Bring your life  
thule.com




204 x1

206 x1

302 x1

303 x1



982 x2




983 x2



52576

x1



50993

x2






x1



x1

1



	X (scale)	X (mm)	X (inch)
<b>VOLKSWAGEN Passat CC</b> , 4-dr Coupé, 08-11	42	1071	42 <sup>1</sup> / <sub>8</sub>
<b>VOLKSWAGEN Passat CC</b> , 4-dr Coupé, *09-11	42	1071	42 <sup>1</sup> / <sub>8</sub>
<b>VOLKSWAGEN CC</b> , 4-dr Coupé, 12-	42	1071	42 <sup>1</sup> / <sub>8</sub>

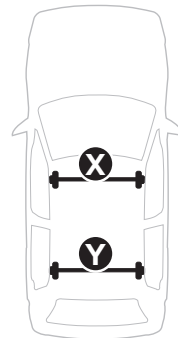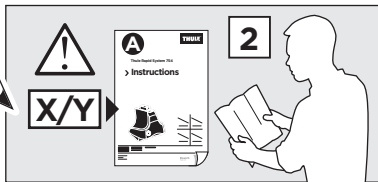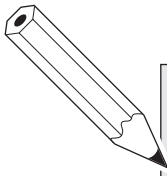



	Y (scale)	Y (mm)	Y (inch)
<b>VOLKSWAGEN Passat CC</b> , 4-dr Coupé, 08-11	38	1031	40 <sup>5</sup> / <sub>8</sub>
<b>VOLKSWAGEN Passat CC</b> , 4-dr Coupé, *09-11	38	1031	40 <sup>5</sup> / <sub>8</sub>
<b>VOLKSWAGEN CC</b> , 4-dr Coupé, 12-	38	1031	40 <sup>5</sup> / <sub>8</sub>

# 2

**VOLKSWAGEN Passat CC**, 4-dr Coupé, 08-11  
**VOLKSWAGEN Passat CC**, 4-dr Coupé, \*09-11  
**VOLKSWAGEN CC**, 4-dr Coupé, 12-

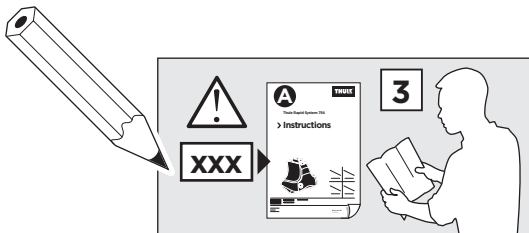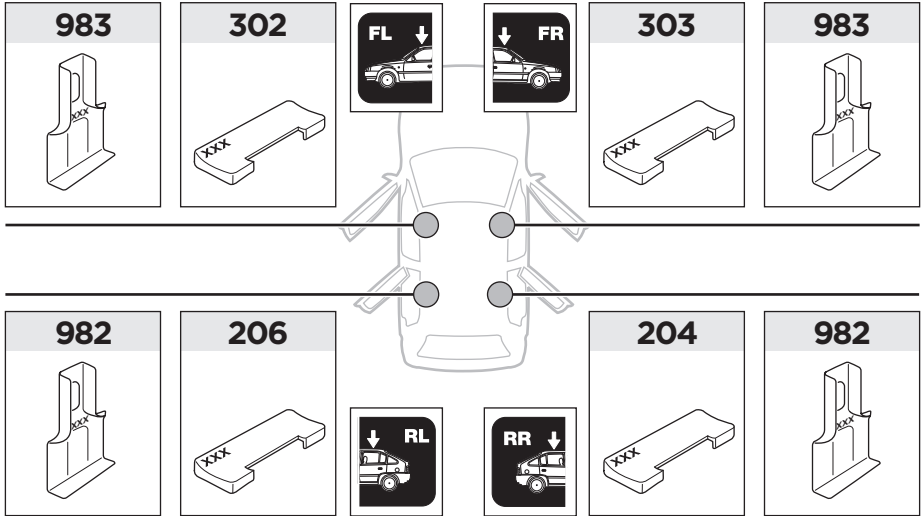

3

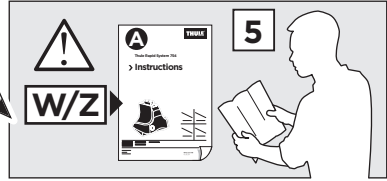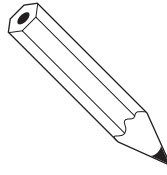

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>VOLKSWAGEN Passat CC</b> , 4-dr Coupé, 08-11	170	730	6 <sup>3</sup> / <sub>4</sub>	28 <sup>3</sup> / <sub>4</sub>
<b>VOLKSWAGEN Passat CC</b> , 4-dr Coupé, *09-11	170	730	6 <sup>3</sup> / <sub>4</sub>	28 <sup>3</sup> / <sub>4</sub>
<b>VOLKSWAGEN CC</b> , 4-dr Coupé, 12-	170	730	6 <sup>3</sup> / <sub>4</sub>	28 <sup>3</sup> / <sub>4</sub>

