
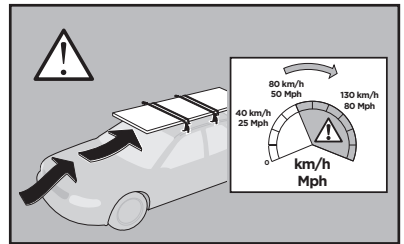
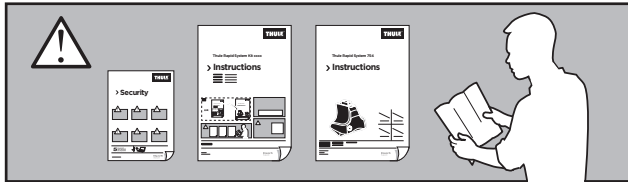
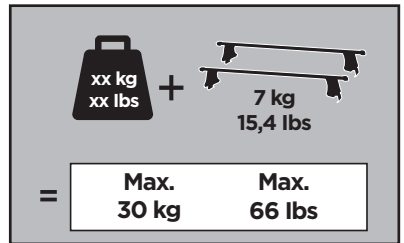


Thule Rapid System Kit 1336

> Instructions


NISSAN Cube, 5-dr MPV, 02- / *09-
NISSAN Cube3 (Cubic), 5-dr MPV, 03-
 *North America

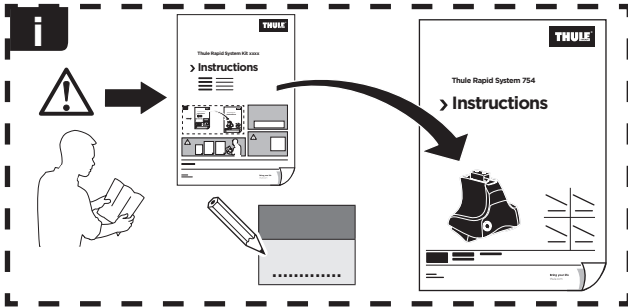

ISO 11154-E



171 x4




624 x2



x1





625 x2



x1

1



	X (scale)	X (mm)	X (inch)
NISSAN Cube , 5-dr MPV, 02- / *09-	64	1291	50 ⁷ / ₈
NISSAN Cube3 (Cubic) , 5-dr MPV, 03-	64	1291	50 ⁷ / ₈

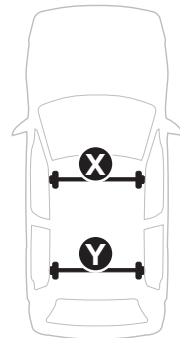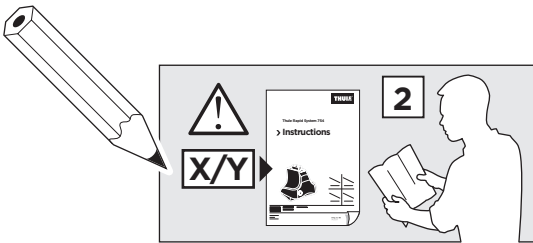


	Y (scale)	Y (mm)	Y (inch)
NISSAN Cube , 5-dr MPV, 02- / *09-	62,5	1276	50 ¹ / ₄
NISSAN Cube3 (Cubic) , 5-dr MPV, 03-	62,5	1276	50 ¹ / ₄

2

NISSAN Cube, 5-dr MPV, 02- / *09-
NISSAN Cube3 (Cubic), 5-dr MPV, 03-

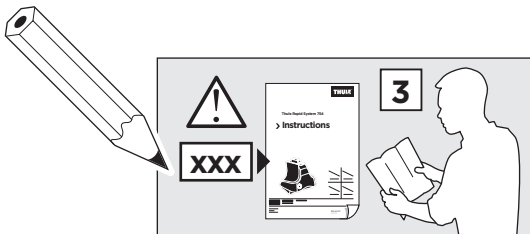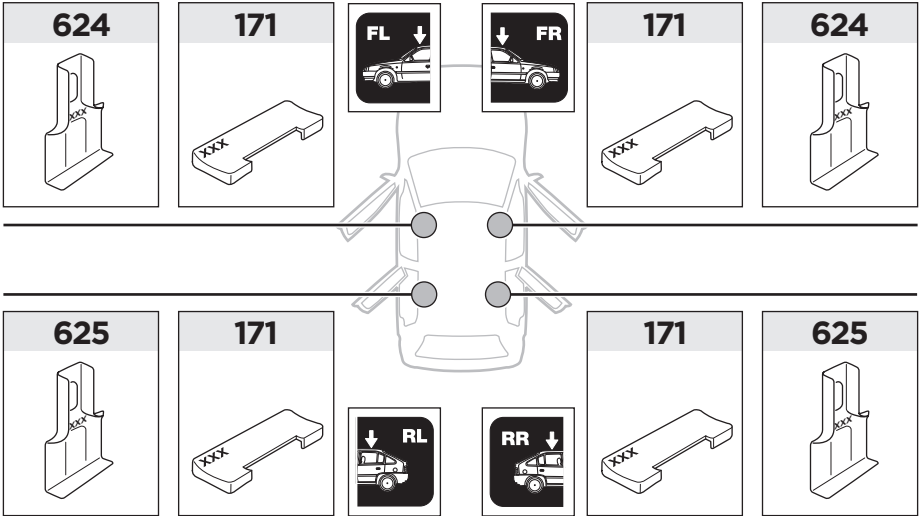

3

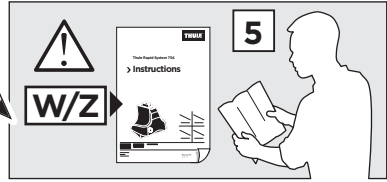

	W (mm)	Z (mm)	W (inch)	Z (inch)
NISSAN Cube , 5-dr MPV, 02- / *09-	545	700	21 1/2	27 1/2
NISSAN Cube3 (Cubic) , 5-dr MPV, 03-	545	700	21 1/2	27 1/2

