





Thule Rapid System Kit 1222

> Instructions

AUDI A8, 4-dr Sedan, 95-00, 01-02 / *96-03

AUDI S8, 4-dr Sedan, 95-00, 01-02 / *01-03

*North America

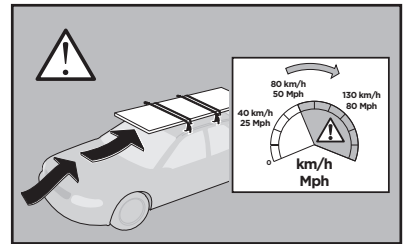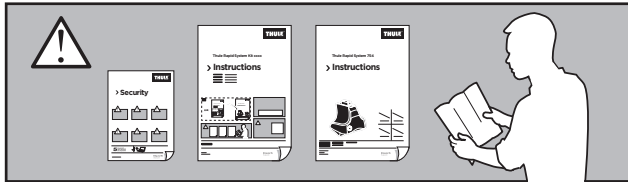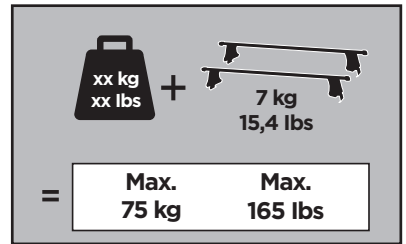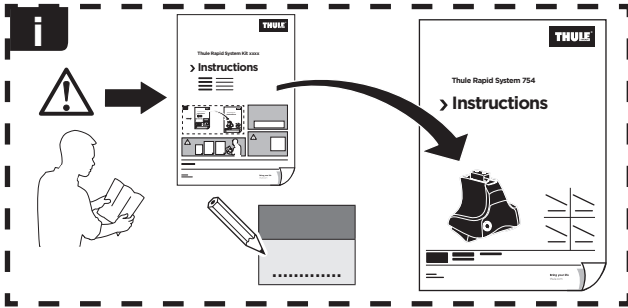

ISO 11154-E


141222

C.20121122
519-1222-02

Bring your life
thule.com



06 x2




079 x2



x1

18 x2





178 x2



x1

1

	X (scale)	X (mm)	X (inch)
AUDI A8 , 4-dr Sedan, 95-00, 01-02 / *96-03	36	1011	39 ³/₄
AUDI S8 , 4-dr Sedan, 95-00, 01-02 / *01-03	36	1011	39 ³/₄

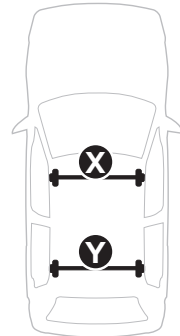
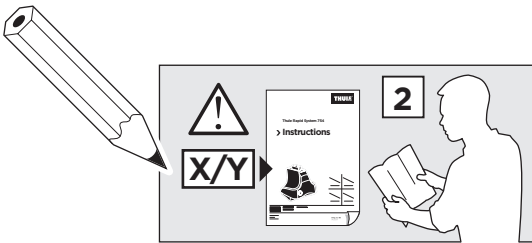




	Y (scale)	Y (mm)	Y (inch)
AUDI A8 , 4-dr Sedan, 95-00, 01-02 / *96-03	38	1031	40 ⁵/₈
AUDI S8 , 4-dr Sedan, 95-00, 01-02 / *01-03	38	1031	40 ⁵/₈

2

AUDI A8, 4-dr Sedan, 95-00, 01-02 / *96-03

AUDI S8, 4-dr Sedan, 95-00, 01-02 / *01-03

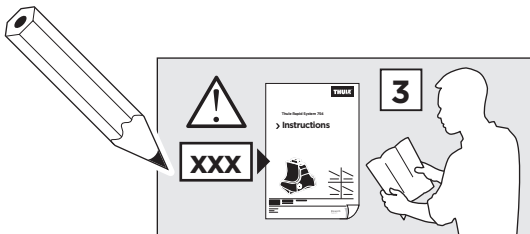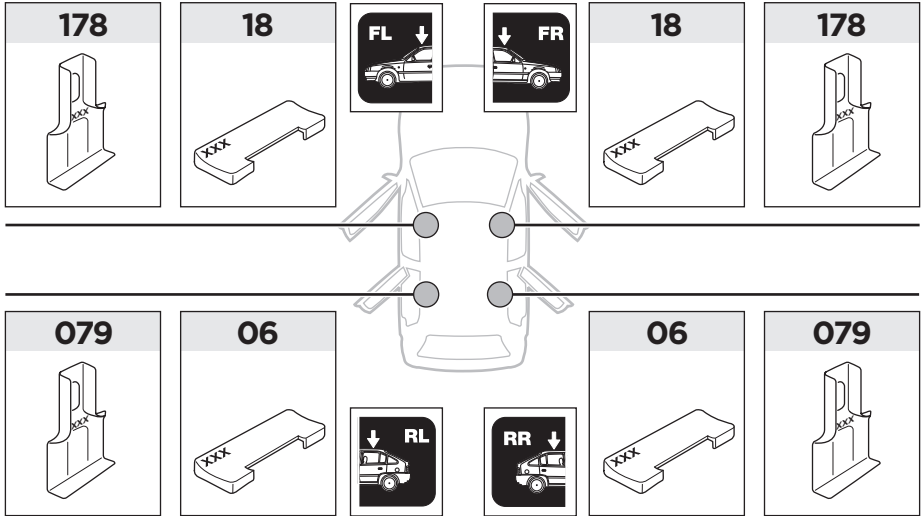

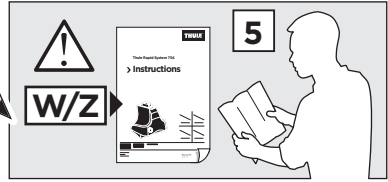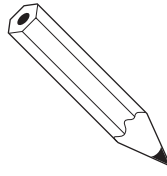3

	W (mm)	Z (mm)	W (inch)	Z (inch)
AUDI A8 , 4-dr Sedan, 95-00, 01-02 / *96-03	255	715	10	28 ¹/₈
AUDI S8 , 4-dr Sedan, 95-00, 01-02 / *01-03	255	715	10	28 ¹/₈

