



FIRST TIME INSTALLATION

* REMOVE PARTS FROM INSIDE THE PACKAGE AND CHECK THEM ALL

* CONTACT YOUR DEALER IF ANY PART IS MISSING OR DAMAGED

* USE THE EQUIPMENT SPECIFIED FOR INSTALLATION

ASSEMBLY INSTRUCTIONS (ROOF RACK)

Product Code: MC02004


COMPATIBLE VEHICLES

AUD Q7 (4M) SUV 16+

PACKAGE INCLUDED


1- TURTLE AIR 2 CHASSIS	4
2- NO.5 ALLEN WRENCH	1
3- CLOTH KEYCHAIN	1
4- 2004 CHIN	4
5- M6x35 INBUS BOLT	8
6- M6 1/2 WASHER	4
7- M6 WASHER	4
8- M6 SQUARE NUT	4

ZIPLOCK BAG

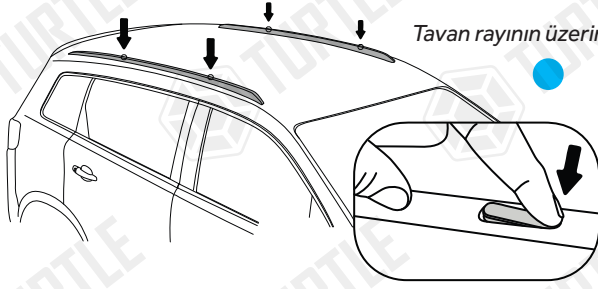

Tavan rayının üzerinde bulunan kapakları açınız.



Open the caps on the rails.

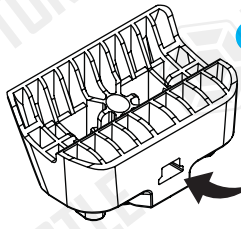

Somunu plastiğin arkasındaki boşluğa yerleştiriniz.

Insert nut into the gap on the back of plastic.


Parçayı tavan rayına gösterildiği şekilde monte ediniz.
Mount the part on the rail as shown.

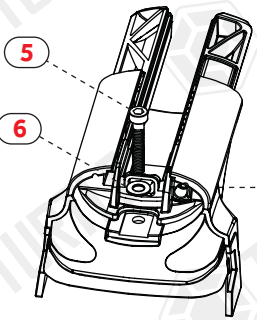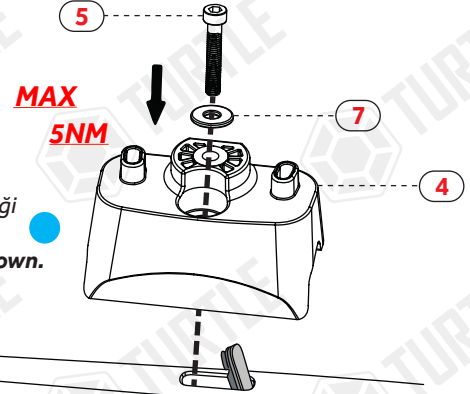

Civata ve küçük pulu plastiğe takınız.
Attach bolt and small washer to the plastic.

Alüminyum profilin her iki ucuna Turtle® kafa plastiklerini takınız.


Attach the head plastic to both ends of the aluminum bar.

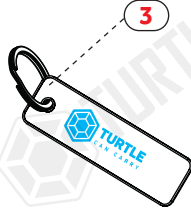

MAX 5NM

Profilleri ortaldıktan sonra yatay sabitleme civatarını sıkınız.

After centering the profiles, tighten the horizontal fixing bolts.

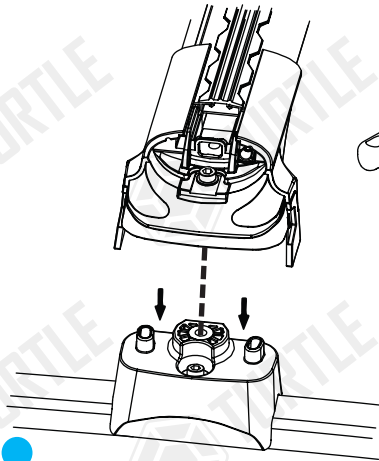


Tavan rayı üzerinde bulunan plastik parçaya ürünü monte edebilirsiniz.


You can assemble the product to plastic piece on the rail.



SCAN ME FOR INSTALLATION VIDEO

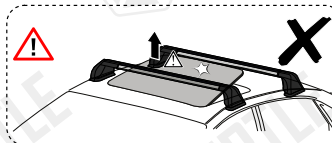

LONG FOR FRONT
SHORT FOR REAR

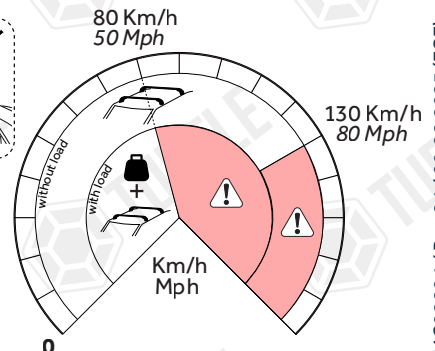

Max. Load
75 kg

* Kullanım amacı; Aracın bagajı yeterli olmadığı durumlarda araç tavanında yük ve eşya taşımak.

* Purpose of usage; Carrying cargo and goods on the vehicle's roof when the vehicle's trunk is not sufficient.