
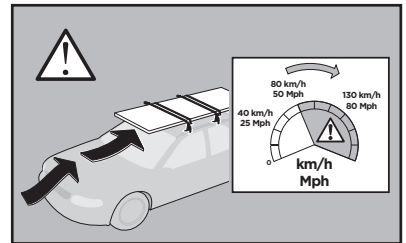
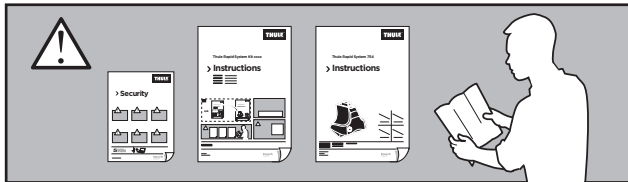
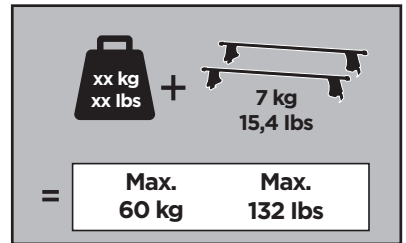


Thule Rapid System Kit 1310

> Instructions

TOYOTA Kluger V, 5-dr SUV, 00-06

TOYOTA Highlander, 5-dr SUV, 00-06

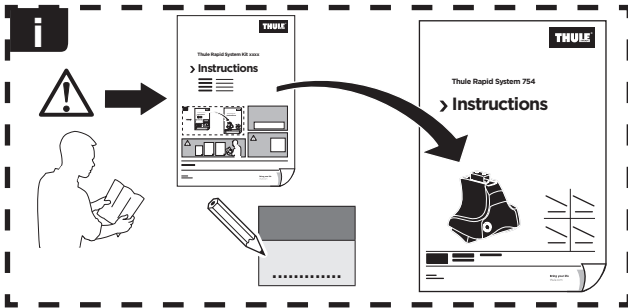

ISO 11154-E

141310


C.20130117
519-1310-01

Bring your life


thule.com



07 x2



137 x2




587 x2



588 x2





x1



x1

1

	X (scale)	X (mm)	X (inch)
TOYOTA Kluger V , 5-dr SUV, 00-06	44,5	1096	43 ¹ / ₈
TOYOTA Highlander , 5-dr SUV, 00-06	44,5	1096	43 ¹ / ₈

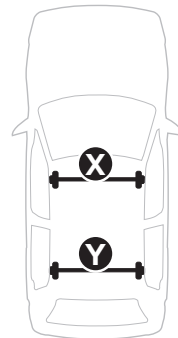
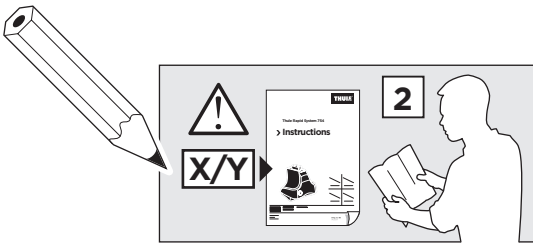



	Y (scale)	Y (mm)	Y (inch)
TOYOTA Kluger V , 5-dr SUV, 00-06	42	1071	42 ¹ / ₈
TOYOTA Highlander , 5-dr SUV, 00-06	42	1071	42 ¹ / ₈

2

TOYOTA Kluger V, 5-dr SUV, 00-06

TOYOTA Highlander, 5-dr SUV, 00-06

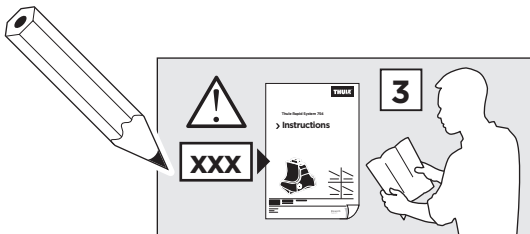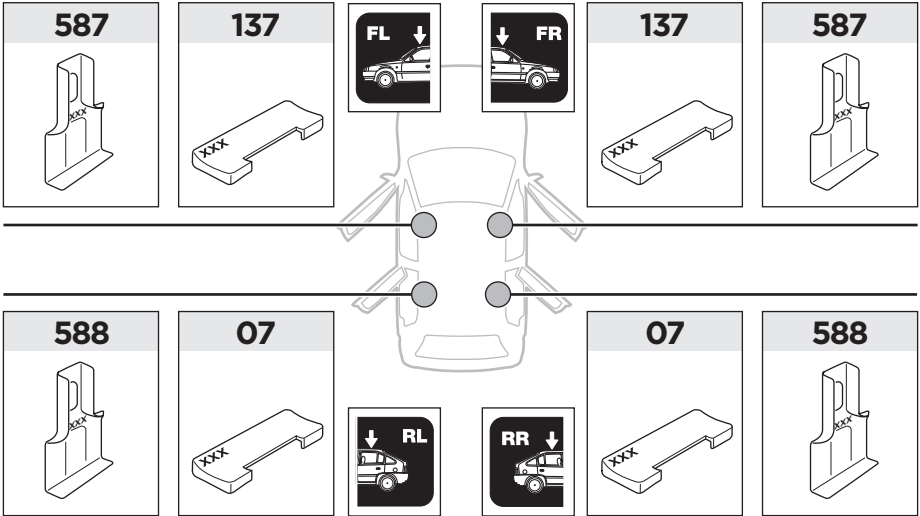

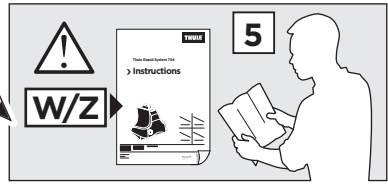3

	W (mm)	Z (mm)	W (inch)	Z (inch)
TOYOTA Kluger V , 5-dr SUV, 00-06	460	710	18 1/8	28
TOYOTA Highlander , 5-dr SUV, 00-06	460	710	18 1/8	28

