
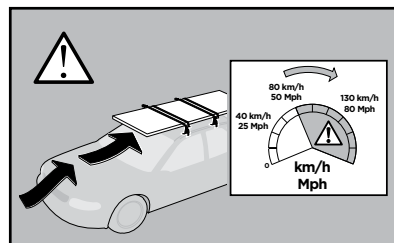
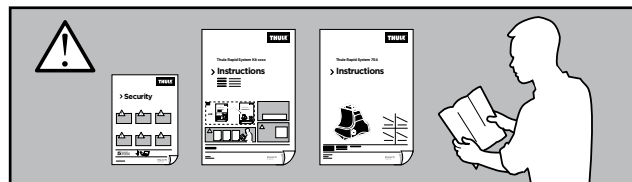
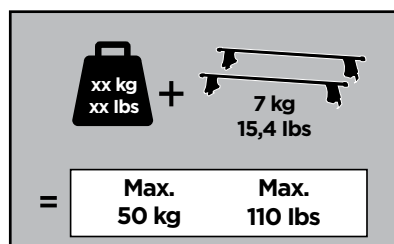


Thule Rapid System Kit 1631

> Instructions

VOLKSWAGEN Scirocco, 3-dr Coupé, 08–

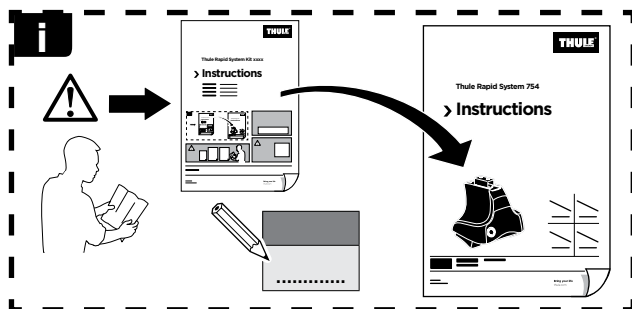


ISO 11154-E

141631



©2012/10/11
519-1631-01

Bring your life
thule.com

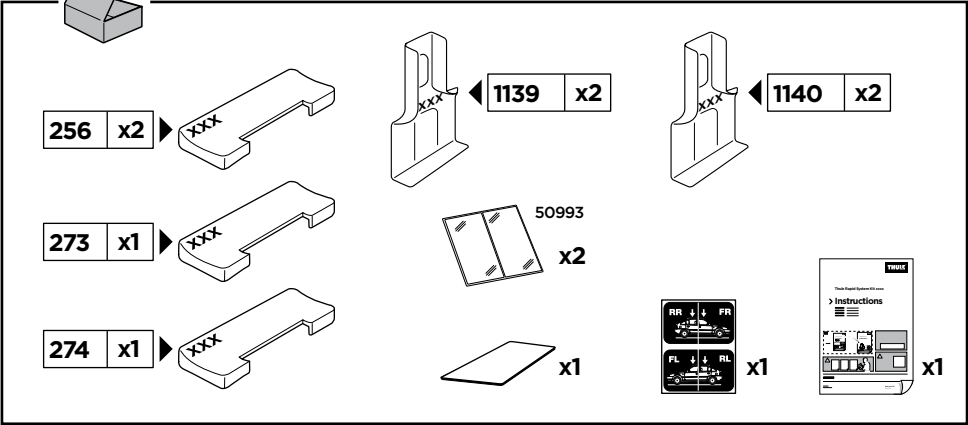

1



	X (scale)	X (mm)	X (inch)
VOLKSWAGEN Scirocco, 3-dr Coupé, 08-	45,5	1106	43 1/2

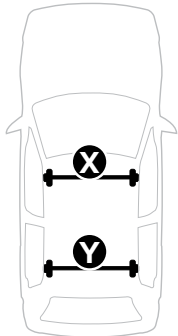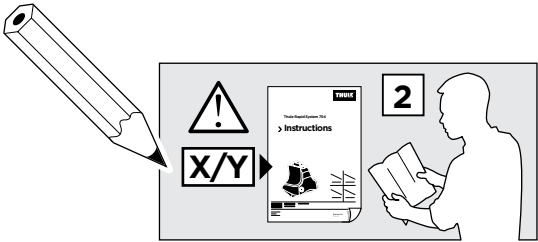



	Y (scale)	Y (mm)	Y (inch)
VOLKSWAGEN Scirocco, 3-dr Coupé, 08-	32	971	38 1/4

2

VOLKSWAGEN Scirocco, 3-dr Coupé, 08-

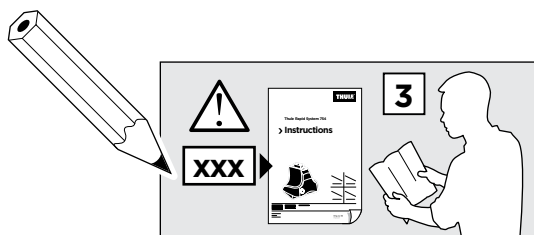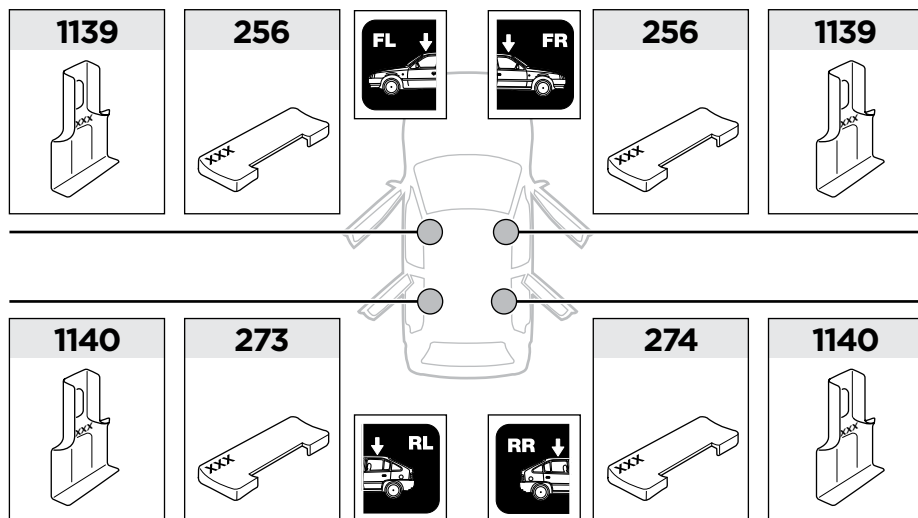

3

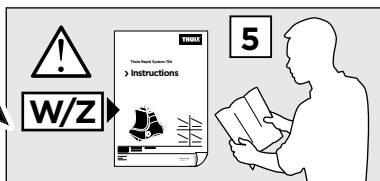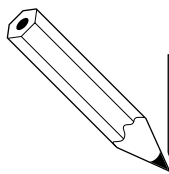

	W (mm)	Z (mm)	W (inch)	Z (inch)
VOLKSWAGEN Scirocco , 3-dr Coupé, 08-	210	755	8 1/4	29 3/4

